
Prager & Co. KG übernimmt keine Haftung für eine unsachgemäße Verwendung dieser Produkte. Prager & Co. KG kann nicht für Schäden an Personen, Gegenständen oder Geräten verantwortlich gemacht werden, die sich bei der Nutzung dieser Werkzeuge ergeben.

Nr. 6668 - MOTOREINSTELL-WERKZEUG-SATZ für VAG 1.2L TFSI

- zur Verwendung: im Audi A1, A3, A3 Sportback, A3 Cabriolet, VW New Beetle, Caddy, Golf, Golf Plus, Golf Cabriolet, Golf Variant, Jetta, Polo, Touran, Skoda Fabia, Fabia Combi, Rapid, Oktavia, Oktavia Combi, Roomster, Yeti, Seat Altea, Altea XL, Ibiza, Ibiza Sportcoupe, Leon, Toledo
- für Motorkennbuchstaben CBZA, CBZB, CBZC
- zum Arretieren der Nocken- und Kurbelwelle
- beim Wechsel der Steuerkette oder der Motorreparatur

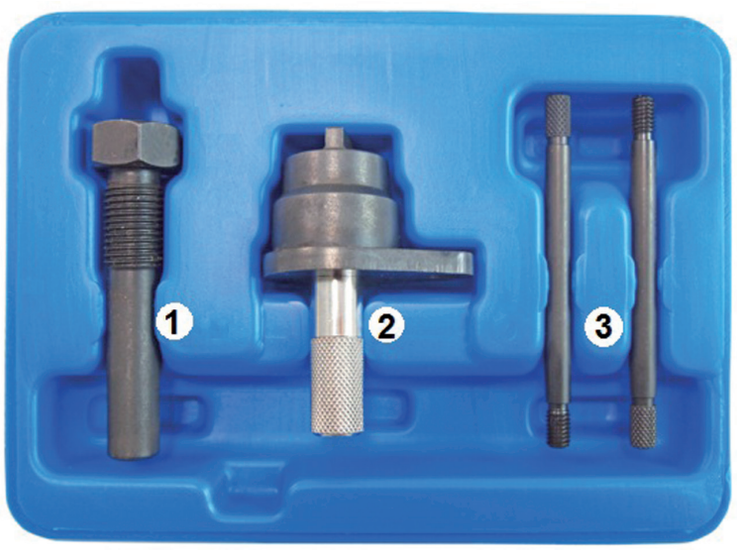


Nr.	Bezeichnung	OEM Vergleichsnummer	Artikelnummer
1	Absteckbolzen Kurbelwelle	T10340	3518-03
2	Blockierung Nockenwelle	T10414	6668-02
3	Führungsbolzen Kompressoreinbau, 2 Stk.	T10341	6668-03

Hinweis: Die Blockierwerkzeuge dürfen nicht beim Lösen von Kurbelwellen- oder Nockenwellen-Rädern zum Gegenhalten verwendet werden!

Prager & Co. KG accepts no liability for improper use of these products. Prager & Co. KG cannot be held responsible for any damage to persons, property, or equipment arising from the use of these tools.

No. 6668 - ENGINE TIMING TOOL SET FOR VAG 1.2L TFSI

- for use in: Audi A1, A3, A3 Sportback, A3 Cabriolet, VW New Beetle, Caddy, Golf, Golf Plus, Golf Cabriolet, Golf Variant, Jetta, Polo, Touran, Skoda Fabia, Fabia Combi, Rapid, Octavia, Octavia Combi, Roomster, Yeti, Seat Altea, Altea XL, Ibiza, Ibiza Sport Coupe, Leon, Toledo
- for engine codes: CBZA, CBZB, CBZC
- for locking the camshaft and crankshaft
- during timing chain replacement or engine repair

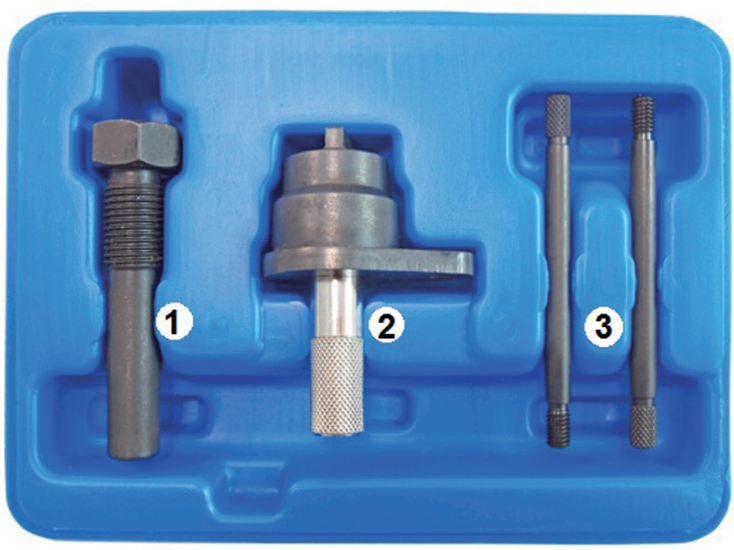

No.	Description	OEM Reference Number	Article Number
1	Crankshaft locking pin	T10340	3518-03
2	Camshaft locking tool	T10414	6668-02
3	Guide bolts for supercharger installation, 2 pcs.	T10341	6668-03

Note: The locking tools must not be used to counter-hold when loosening crankshaft or camshaft pulleys!